


Hardwired LED Installation

Instruction Guide

We've updated our shelving to allow the lights to be installed with the wires protruding out of the back of the shelf (2 inches in) from the right AND left side making installation more flexible to accommodate for your space!

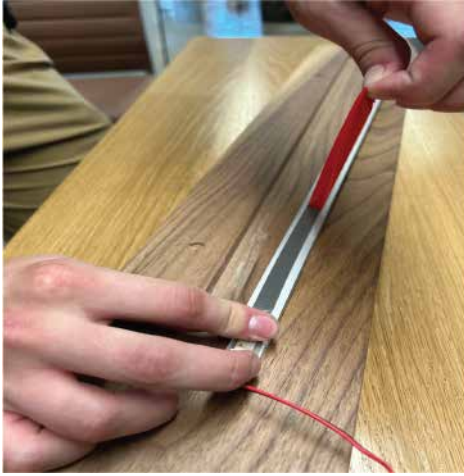

Step 1

Peel the red plastic cover off of the adhesive strip.



Step 2

Insert the channel at a slight angle starting on the side opposite the wires.



Step 2A

Fish the wires through the hole and tuck any access light strip down.



J THOMAS HOME

Think Handcrafted


Hardwired LED Installation

Instruction Guide



Step 2B

Once the light strip is placed, adhere the high quality 3M VHB adhesive tape to the light strip and hold for 5 seconds, repeating along the length of the channel. Please be aware the adhesive is pressure sensitive and will attach securely when pressure is applied.

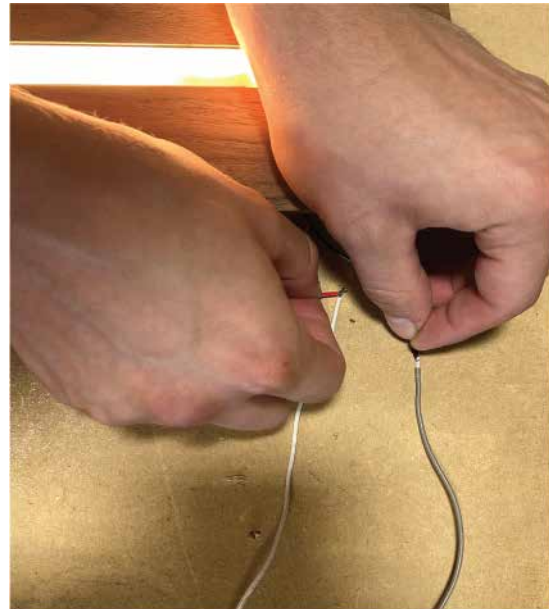

Step 3

Every light strip is tested prior to shipping. Rarely, the connection from the wire to the light strip can shift and loosen during shipping and installation. Test the light strip to ensure it is functioning properly.



Step 4

In order to get a perfect fit, trim the lens (white plastic cover) with scissors. If you need to reinstall the lens into the channel, start on one end and work your way down along the length of the channel.

Hardwired LED Installation

Instruction Guide



Step 5

Slide the shelf onto the brackets (brackets should already be installed on the wall) and hook up the electrical connections.

Step 6

Relax! You're Finished!

